



← Go Back

Hardware

UNO R3

Tutorials

Analog Input

Analog Read Serial

Blink

Digital Read Serial

Arduino UNO Board

Anatomy

Getting Started with
Arduino UNO R3

Overview of the Arduino
UNO Components

Controlling PWM Output
with a Potentiometer via
MATLAB®

Home / Hardware / UNO R3 / Overview
of the Arduino UNO Components

ON THIS

Micro

Digital

Analog

Power


Other

Overview of the Arduino UNO Components

An in-depth look at the classic Arduino
UNO board.

Author ◇ Arduino Last
revision ◇ 07.10.2025

Looking at the board from the top
down, this is an outline of what you
will see (parts of the board you might
interact with in the course of normal
use are highlighted):

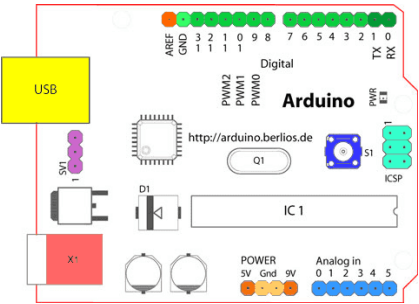

The Arduino UNO.

Starting clockwise from the top
center:

Analog Reference pin (orange)

Digital Ground (light green)

Digital Pins 2-13 (green)

Digital Pins 0-1/Serial In/Out -
TX/RX (dark green) - These pins

Help

cannot be used for digital i/o
(digitalRead and digitalWrite) if

you are also using serial
communication (e.g.
Serial.begin).

Reset Button - S1 (dark blue)

In-circuit Serial Programmer
(blue-green)

Analog In Pins 0-5 (light blue)

Power and Ground Pins (power:
orange, grounds: light orange)

External Power Supply In (9-
12VDC) - X1 (pink)

Toggles External Power and USB
Power (place jumper on two
pins closest to desired supply) -
SV1 (purple)

USB (used for uploading
sketches to the board and for
serial communication between
the board and the computer;
can be used to power the
board) (yellow)

Microcontrollers

ATmega328P (used on most recent
boards)

Digital I/O Pins: 14 (of which 6
provide PWM output)

Analog Input Pins: 6 (DIP) or 8
(SMD)

DC Current per I/O Pin: 40 mA

Flash Memory: 32 KB

SRAM: 2 KB

EEPROM: 1 KB

ATmega168 (used on most Arduino
Diecimila and early Duemilanove)

Digital I/O Pins: 14 (of which 6 provide PWM output)

Analog Input Pins: 6 (DIP) or 8 (SMD)

DC Current per I/O Pin: 40 mA

Flash Memory 16 KB:

SRAM: 1 KB

EEPROM: 512 bytes

ATmega8 (used on some older board)

Digital I/O Pins: 14 (of which 3 provide PWM output)

Analog Input Pins: 6

DC Current per I/O Pin: 40 mA

Flash Memory: 8 KB

SRAM: 1 KB

EEPROM: 512 bytes

Digital Pins

In addition to the specific functions listed below, the digital pins on an Arduino board can be used for general purpose input and output via the `pinMode()`, `digitalRead()`, and `digitalWrite()` commands. Each pin has an internal pull-up resistor which can be turned on and off using `digitalWrite()` (w/ a value of HIGH or LOW, respectively) when the pin is configured as an input. The maximum current per pin is 40 mA.

Serial: 0 (RX) and 1 (TX). Used to receive (RX) and transmit (TX)

I I L serial data. On the Arduino Diecimila, these pins are connected to the corresponding pins of the FTDI USB-to-TTL Serial chip. On the Arduino BT, they are connected to the corresponding pins of the WT11 Bluetooth® module. On the Arduino Mini and LilyPad Arduino, they are intended for use with an external TTL serial module (e.g. the Mini-USB Adapter).

External Interrupts: 2 and 3. These pins can be configured to trigger an interrupt on a low value, a rising or falling edge, or a change in value. See the [attachInterrupt\(\)](#) function for details.

PWM: 3, 5, 6, 9, 10, and 11. Provide 8-bit PWM output with the [analogWrite\(\)](#) function. On boards with an ATmega8, PWM output is available only on pins 9, 10, and 11.

BT Reset: 7. (Arduino BT-only) Connected to the reset line of the Bluetooth® module.

SPI: 10 (SS), 11 (MOSI), 12 (MISO), 13 (SCK). These pins support SPI communication, which, although provided by the underlying hardware, is not currently included in the Arduino language.

LED: 13. On the Diecimila and LilyPad, there is a built-in LED connected to digital pin 13. When the pin is HIGH value, the LED is on, when the pin is LOW, it's off.

Analog Pins



In addition to the specific functions listed below, the analog input pins support 10-bit analog-to-digital conversion (ADC) using the `analogRead()` function. Most of the analog inputs can also be used as digital pins: analog input 0 as digital pin 14 through analog input 5 as digital pin 19. Analog inputs 6 and 7 (present on the Mini and BT) cannot be used as digital pins.

I2C: 4 (SDA) and 5 (SCL).
Support I2C (TWI)
communication using the `Wire` library (documentation on the Wiring website).

Power Pins

VIN (sometimes labelled "9V").
The input voltage to the Arduino board when it's using an external power source (as opposed to 5 volts from the USB connection or other regulated power source). You can supply voltage through this pin, or, if supplying voltage via the power jack, access it through this pin. Note that different boards accept different input voltages ranges, please see the documentation for your board. Also note that the LilyPad has no VIN pin and accepts only a regulated input.

5V. The regulated power supply used to power the microcontroller and other

components on the board. This can come either from VIN via an on-board regulator, or be supplied by USB or another regulated 5V supply.

3V3. (Diecimila-only) A 3.3 volt supply generated by the on-board FTDI chip.

GND. Ground pins.

Other Pins

AREF. Reference voltage for the analog inputs. Used with [analogReference\(\)](#).

Reset. (Diecimila-only) Bring this line LOW to reset the microcontroller. Typically used to add a reset button to shields which block the one on the board.

Suggest changes	Need support?	License & Trademark
The content on docs.arduino.cc is facilitated through a public GitHub repository . If you see anything wrong, you can edit this page here .	Help Center Ask the Arduino Forum Discover Arduino Discord	The Arduino documentation is licensed under the Creative Commons Attribution-Share Alike 4.0 license. Arduino and the Arduino logo are trademarks or registered trademarks of Arduino S.r.l.

Was this article helpful?



ARDUINO®

[Back to top](#)

© 2026 Arduino

- [Trademarks & Copyrights](#)
- [Whistleblowing](#)
- [Digital Services Act](#)
- [Terms of Service](#)
- [Privacy Policy](#)
- [Security](#)
- [Cookie Settings](#)